
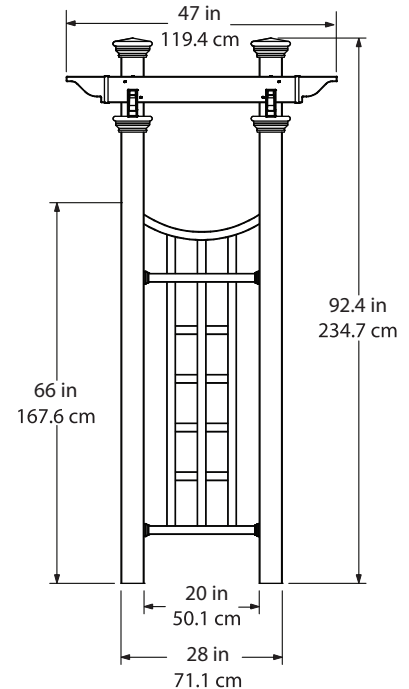
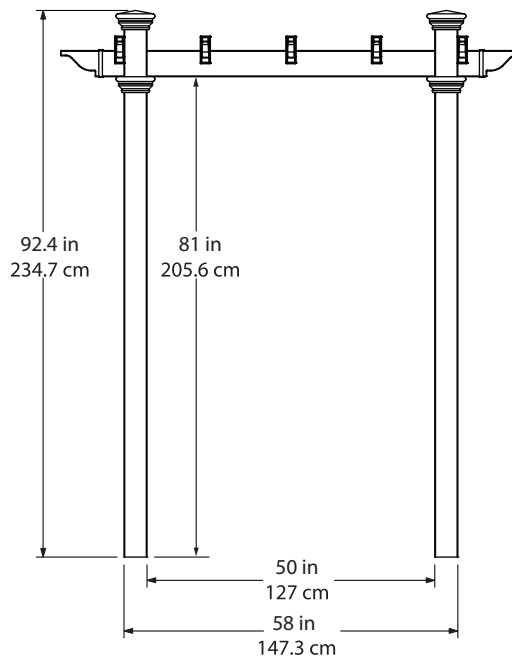


The Fairfield Deluxe Arbor / Arch

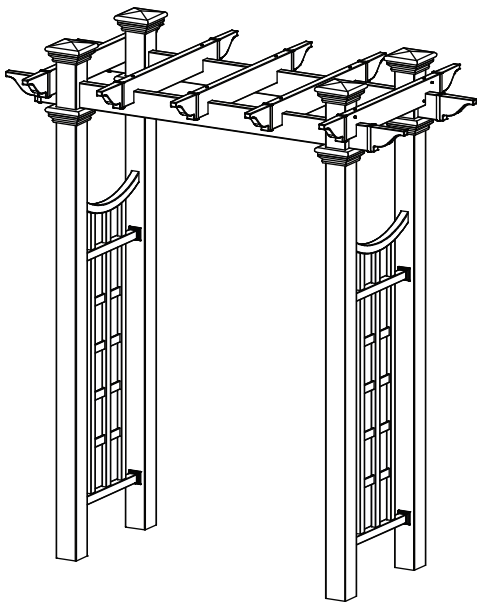


Please read through before starting assembly.

IMPORTANT: CHECK THE INSIDE OF YOUR POSTS FOR ALL MATERIALS.

Check Box for These Contents

In the event of missing or defective parts please call our customer service dept. at 1 800 282 9346 (Mon. to Fri. 8:00 AM to 5:00 PM EST)

1. Pergola End Caps (14) - 10700-1
2. Post Caps (4) - 10735-1
3. Posts (4) - 4"x4"x 90.5" (10.2 x 10.2 x 230 cm) - 10736-1
4. Post Trims (4) - 10737-1
5. Rafters (5) - 33.5" (85 cm) - 10734-1
6. Carrying Beams (2) - 66.5" (169 cm) - 10739-1
7. Side Panel Curved Top Rails (2) - 10740-1
8. Sur-Fit Bracket for Side Panel Horizontals (8) - 10730-1
9. Side Panel Horizontal Mid-Rails (2) - 19.75" (50.2 cm) - 10741-1
10. Side Panel Outside Vertical Spindles (Long) (4) - 52.75" (134 cm) - 10742-1
11. Side Panel Middle Vertical Spindles (Short) (2) - 52.125" (132.4 cm) - 10743-1
12. Side Panel Horizontal Short Spindles (8) - 11.85" (30 cm) - 10744-1
13. Side Panel Horizontal Bottom Rails (2) - 19.75" (50.2 cm) - 10745-1
14. 1 1/2 in. (3.8 cm) Stainless Steel Screws (for Sur-Fit Brackets) (24) - 20005
15. 3 in. (7.6 cm) Stainless Steel Screws (for Rafters) (18) - 20007
16. Tube of Vinyl Glue (1) - 20000
17. 2 1/2 in. (6.3 cm.) Stainless Steel Screws (for wood post to post connection) (8) - 20009-1

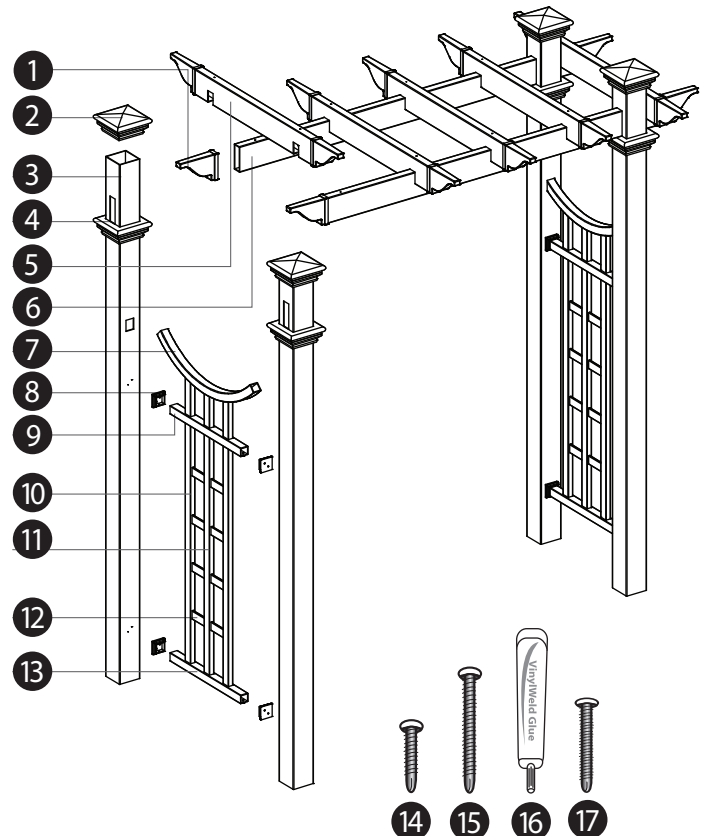

(Not to scale)

General Information

- Read Instructions through carefully before beginning assembly.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approx 10'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

Tools You Will Need

- Hammer
- Tape Measure
- Level
- Stool or Short Ladder
- Shovel or Auger
- Cordless Drill

Additional Materials Required

- 4" x 4" x 8' (244 cm) Long Wood Posts (4)
(Only for Option 1)
- Concrete Ready Mix
* Purchase separately from your local
lumber store

You have Two Options to secure the Arbor

(*purchasedseparately)

OPTION ONE - If Your Arbor:

- is going to be installed with fencing or a gate
- is located in a high wind or hurricane area
- is located in ground conditions that are not level

Consider Using:

***4" x 4" x 8' Long Wood Post (4)**

17 2 1/2" Stainless Steel Screws (8)

- Recommended to be installed in concrete footing

OPTION TWO - If Your Arbor:

- is intended to be used as a stand alone garden accent or pathway
- is located on level ground

Consider Using:

***4" EZ Mount Post (Package of 4)**

- Purchase from Vita, www.wearevita.com
- Instructions are included with the kit


Important Note for Option 1:

If you are planning on installing your arbor into the ground using pressure treated wood posts, we recommend installing the wood into the posts at this stage prior to securing the Sur-Fit brackets.

Insert the wood post into the bottom of the post until it is approximately 5 ft (152.4 cm) into the vinyl cavity with approximately 3 ft (91.45 cm) remaining at the bottom to insert into the ground. Repeat the same procedure for the remaining 3 posts.

Using two of the 2 1/2" screws provided per post, secure the bottom of the vinyl to the wood approximately 9" up from the bottom of the vinyl sleeve, just below the routed hole in the post.

If you are using Option 2 method, you can disregard this note and proceed with Step 1 as indicated.



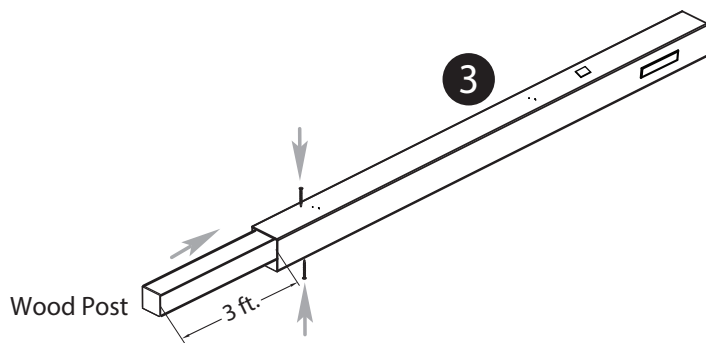


STEP ONE



Assemble the Arbor / Arch Top

- 1 Lay out the two carrying beams as illustrated with pre-drilled holes facing up.
- 2 Position the three rafters over the respective pre-drilled holes on the carrying beams as illustrated.
- 3 Using the 3" (76 mm) screws fasten the three middle rafters to the carrying beams.



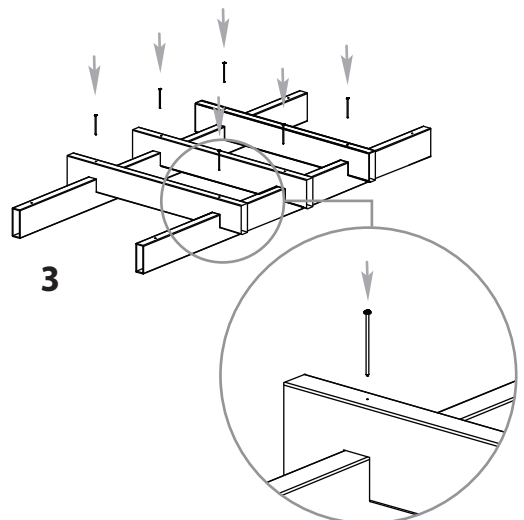
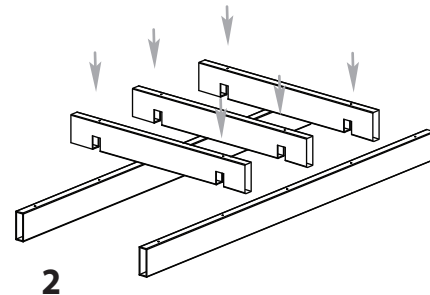
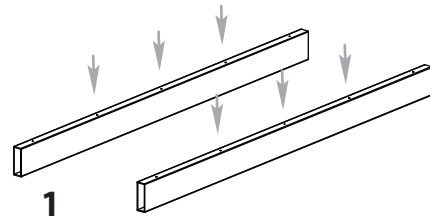


STEP TWO

Assemble the Side Panels

- 1 Insert the short horizontal spindles into the middle vertical spindle (holes on both sides).
- 2 Slide the two outside vertical spindles into position as illustrated (holes on one side).
- 3 Layout the bottom rail and insert the vertical spindles as illustrated.
- 4 Slide horizontal mid-rail over the vertical spindles as illustrated.
- 5 Slide the horizontal curved rail down over the vertical spindles as illustrated to complete one side panel.
- 6 Repeat for other side panel.

Note: Middle Spindle is slightly shorter than Side Vertical Spindles.

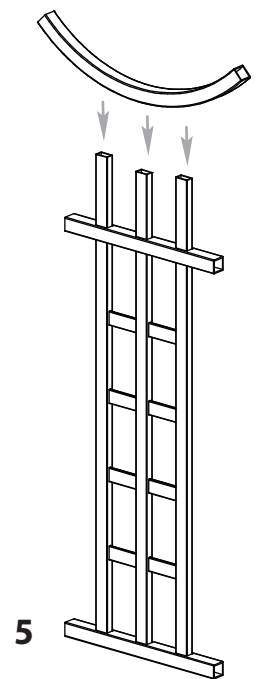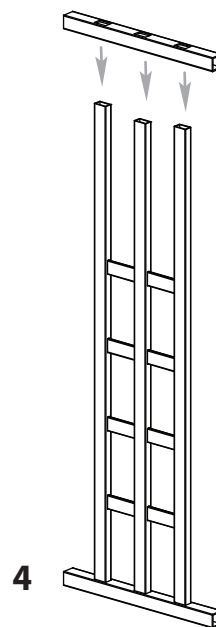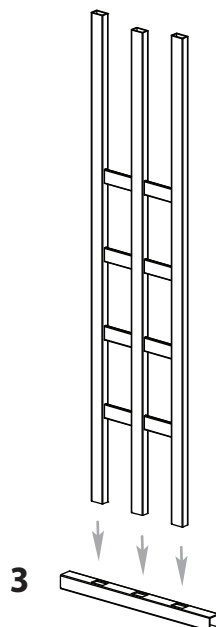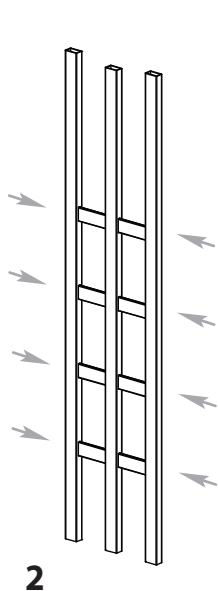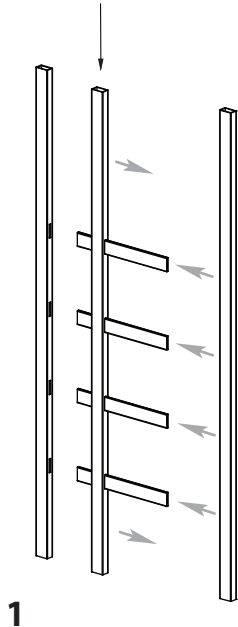

1

2

3






4

5

STEP THREE

Attach Sur-Fit Brackets

- 1** Attach Sur-Fit Brackets using 1 1/2" (38 mm) screws onto the posts using the pre-drilled holes as guides. Single hole on the side of brackets to face down.
- 2** Set out one post and complete the side panel by inserting the curved top rail first into the hole on the post, followed by the other two rails into the brackets on the post as illustrated.
- 3** Fasten horizontal rails into the Sur-Fit Brackets using small screws as illustrated. You will need a helper at this stage.
- 4** Layout the opposite post and insert the finished side panel with post connected as illustrated.
- 5** Fasten horizontal rail into Sur-Fit Brackets using small screws.
- 6** Repeat for other side panel.

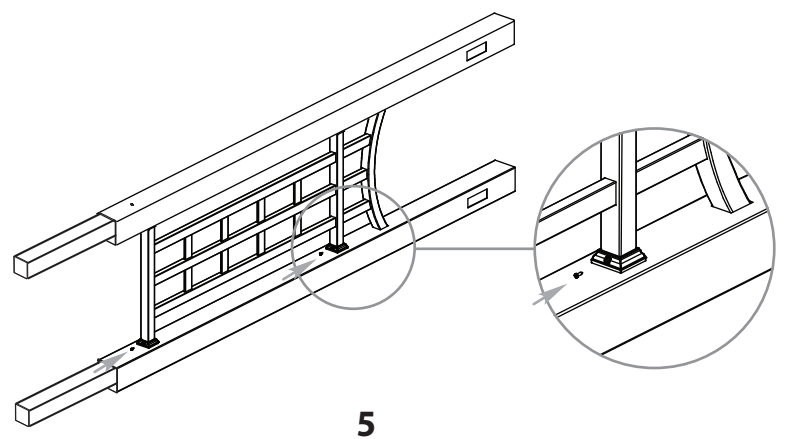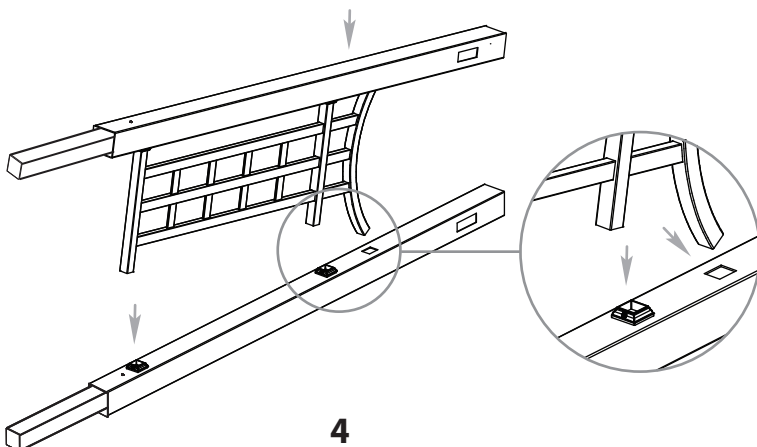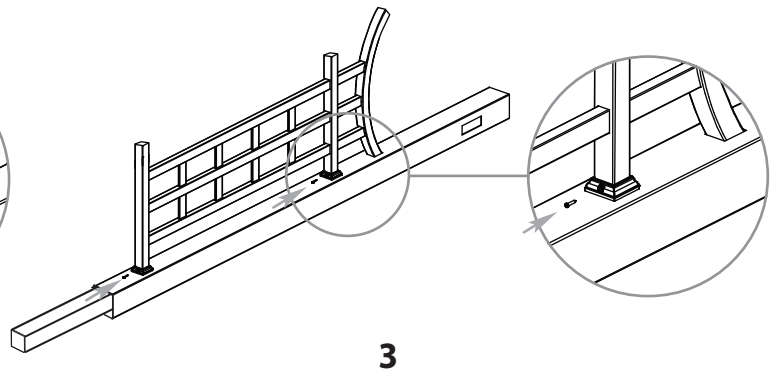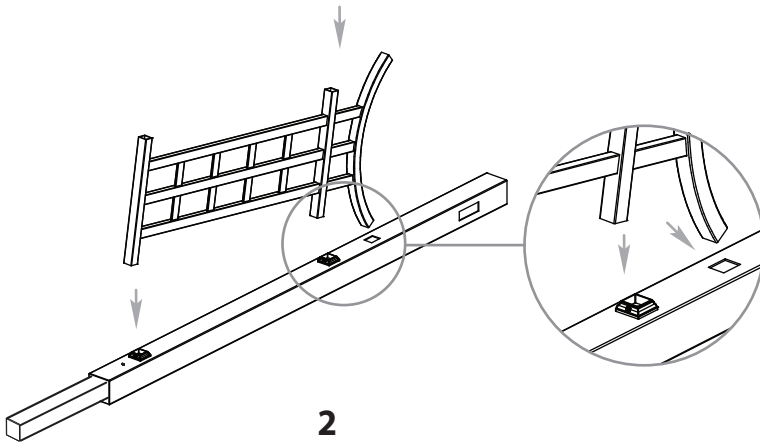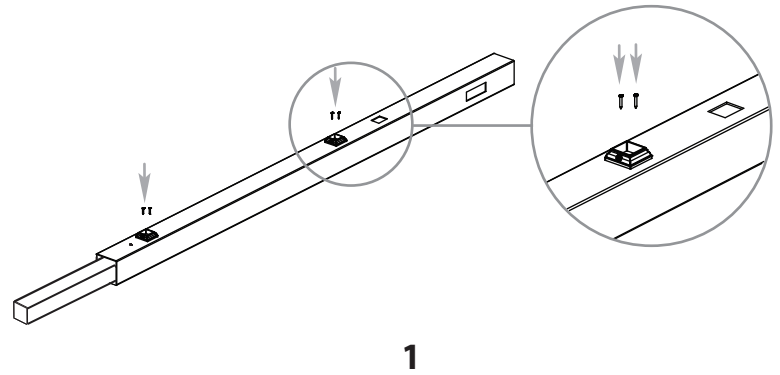


STEP FOUR

vita

Connect the Arbor / Arch Top to the Posts

- 1** Slide trim caps into place as illustrated.
- 2** Move side panels to their final location.
- 3** Insert the semi-assembled arbor / arch top into the holes at the top of posts as illustrated.
- 4** Adjust the opening width to 50 in. (127 cm.).
- 5** Install pergola end caps using glue as illustrated.
- 6** Position the last two rafters as illustrated.
- 7** Fasten into place both horizontally (2 locations) and vertically (1 location) using 3" (76 mm) screws as illustrated. The screws provided are self tapping and do not require pre-drilled holes.
- 8** Place post caps on top of posts.

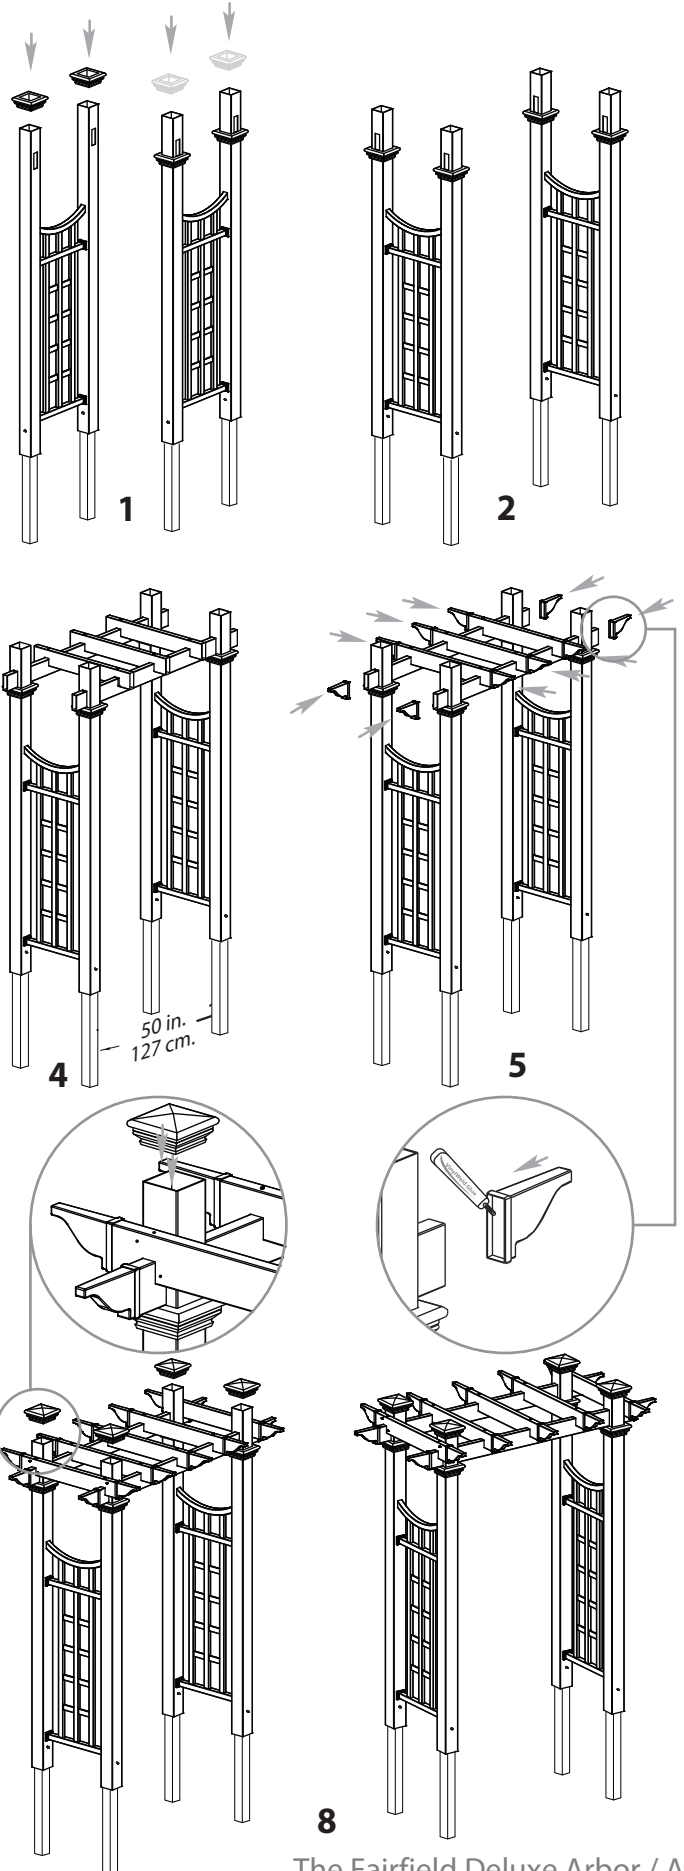

STEP FIVE


Secure the Arbor

Into Earth with Concrete Footing (Option One)


Arch must be well secured to prevent tipping over from wind load, etc.

- 1** Move the arbor to it's final location (you will need a helper).
- 2** When you have identified the location of each post, mark the positions on the ground and then move the arbor aside.
- 3** Excavate four holes approx. 36 in. (91.4 cm.) deep. The location and excavation of these four holes is **the most critical step** and should be completed with care.
- 4** Carefully move the arbor back into position and level both horizontally and vertically.
- 5** Check your measurements to confirm that arbor is secured and placed correctly.
- 6** Backfill the holes with cement.

1

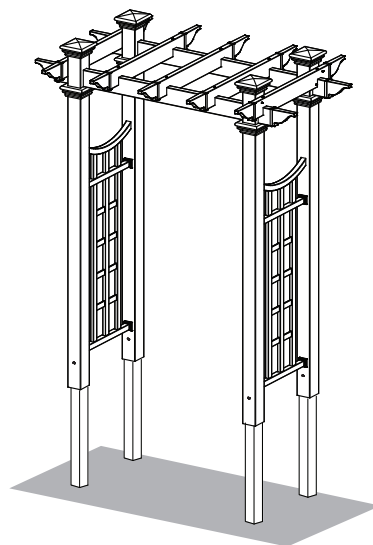


2

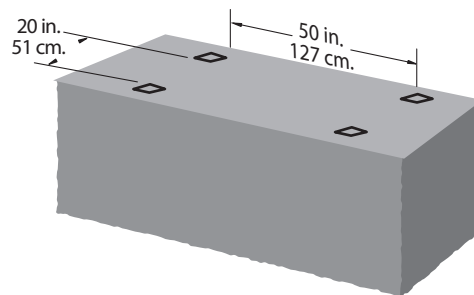


(Measurements shown are approximate)

3

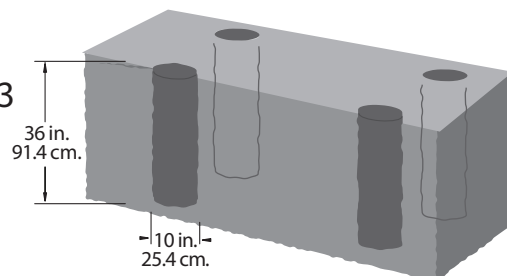


4

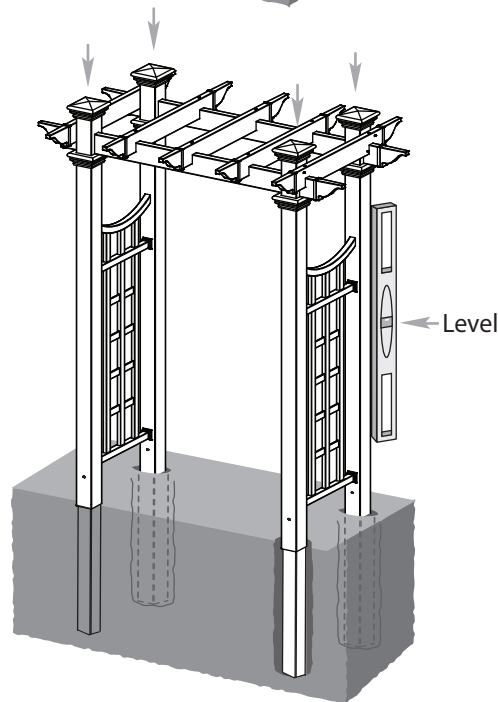

ASSEMBLY INSTRUCTIONS

Cottage Picket Wings

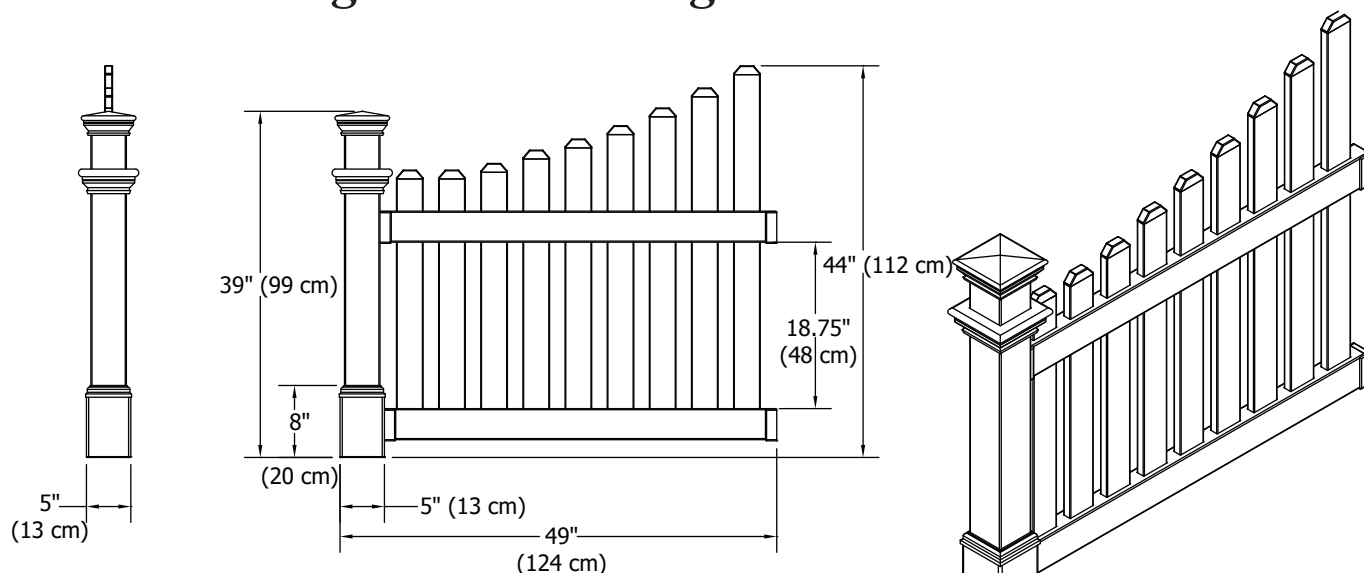

Please read through before starting assembly.

Check Box for These Contents (1 Box)

In the event of missing or defective parts please call our customer service dept. at **1 800 282 9346** (Mon. to Fri. 8:00 AM to 5:00 PM EST).


1. Posts (2) 4" x 4" x 54" (10 cm x 10 cm x 137 cm) - 10126
2. Top Rails (2) 2" x 3.5" x 44.5" (5 cm x 9 cm x 113 cm) - 10103
3. Bottom Rails (2) 2" x 3.5" x 43.5" (5 cm x 9 cm x 110 cm) - 10104
4. Pickets (4) Length 29.25" (74 cm) - 10105
- Pickets (2) Length 30" (76 cm) - 10107
- Pickets (2) Length 31.5" (80 cm) - 10108
- Pickets (2) Length 32.75" (83 cm) - 10109
- Pickets (2) Length 34.25" (87 cm) - 10110
- Pickets (2) Length 36.25" (92 cm) - 10111
- Pickets (2) Length 38.5" (97 cm) - 10112
- Pickets (2) Length 41" (104 cm) - 10113
5. External Post Caps (2) 4" x 4" (10 cm x 10 cm) - 10735-1
6. Post Trim Caps (2) 4" x 4" (10 cm x 10 cm) - 10737-1
7. Base Moldings (2) 5" x 5" (13 cm x 13 cm) - BM20022
8. Rail Mount Brackets (8) 2" x 3.5" (5 cm x 9 cm) - 10045
- Hardware Kit (Includes):**
9. 5/8" (16 mm) Self-tapping stainless Screws (24) - 20016
10. 3" (76 mm) Stainless Steel Screws (8) - 20007
11. Rail end spacers (2) 2" x 3.5" x .5" (5 cm x 9 cm x 13 mm) - 10217
12. Tube of vinyl weld glue (1) - 20000

Tools You Will Need

- Cordless Drill with #2 Phillips bit
- Tape measure
- Pencil
- Level
- Shovel
- Two bags of pre-mix concrete (optional)

General Information

- **Read Instructions through carefully before beginning assembly.**
- When handling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approx 5' x 5' (1.5 m x 1.5 m) for unobstructed handling.

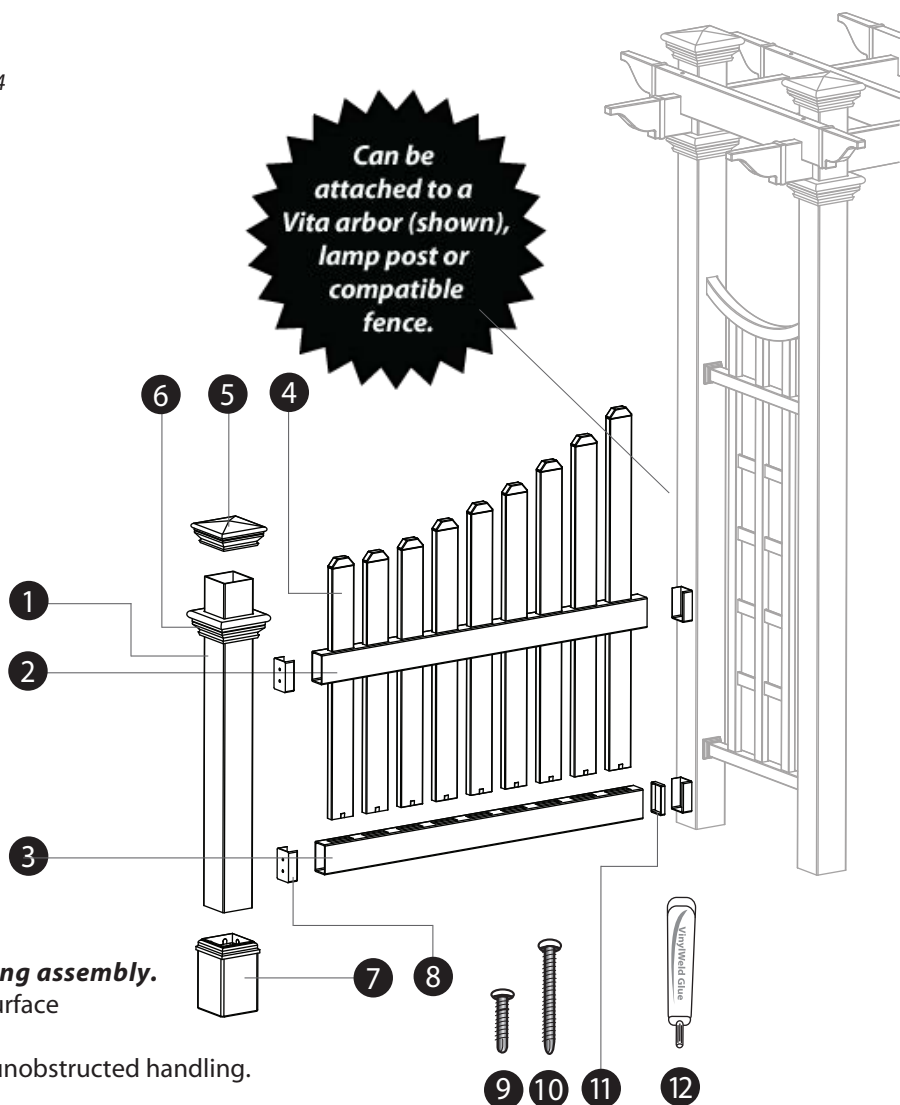

Not to Scale

V3 / Sep 26, 2025

Cottage Picket Wings Installation

STEP ONE

A

Lay out one of the posts (part 1). Measure 8" (20.3 cm) from one end of the post and put a mark. Center the rail mount bracket (part 8) on the post, with the open end at the 8" mark. Using two screws 5/8" (16 mm), fasten the bracket to the post as illustrated. Repeat this for the second post. **Note:** All screws are self-tapping and require no pre-drilling.

B



Take one of the posts and measure 29" (73.7 cm) from the same end of the post as in step 1. Put a mark on the post at this distance.

Slip one of the base moldings (part 7) onto the opposite end of the post as illustrated. Slide it up the post until the top edge of the molding is at the 29" (73.7 cm) mark.

C

Center another rail mount bracket on the base molding, keeping the open end of it tight against the raised lip of the base molding trim. Fasten the bracket in place using two 3" (76 mm) screws. Repeat steps A through C for the other post.

Note: The distance between the two brackets should measure approximately 18 3/4" (47.6 cm) when finished.

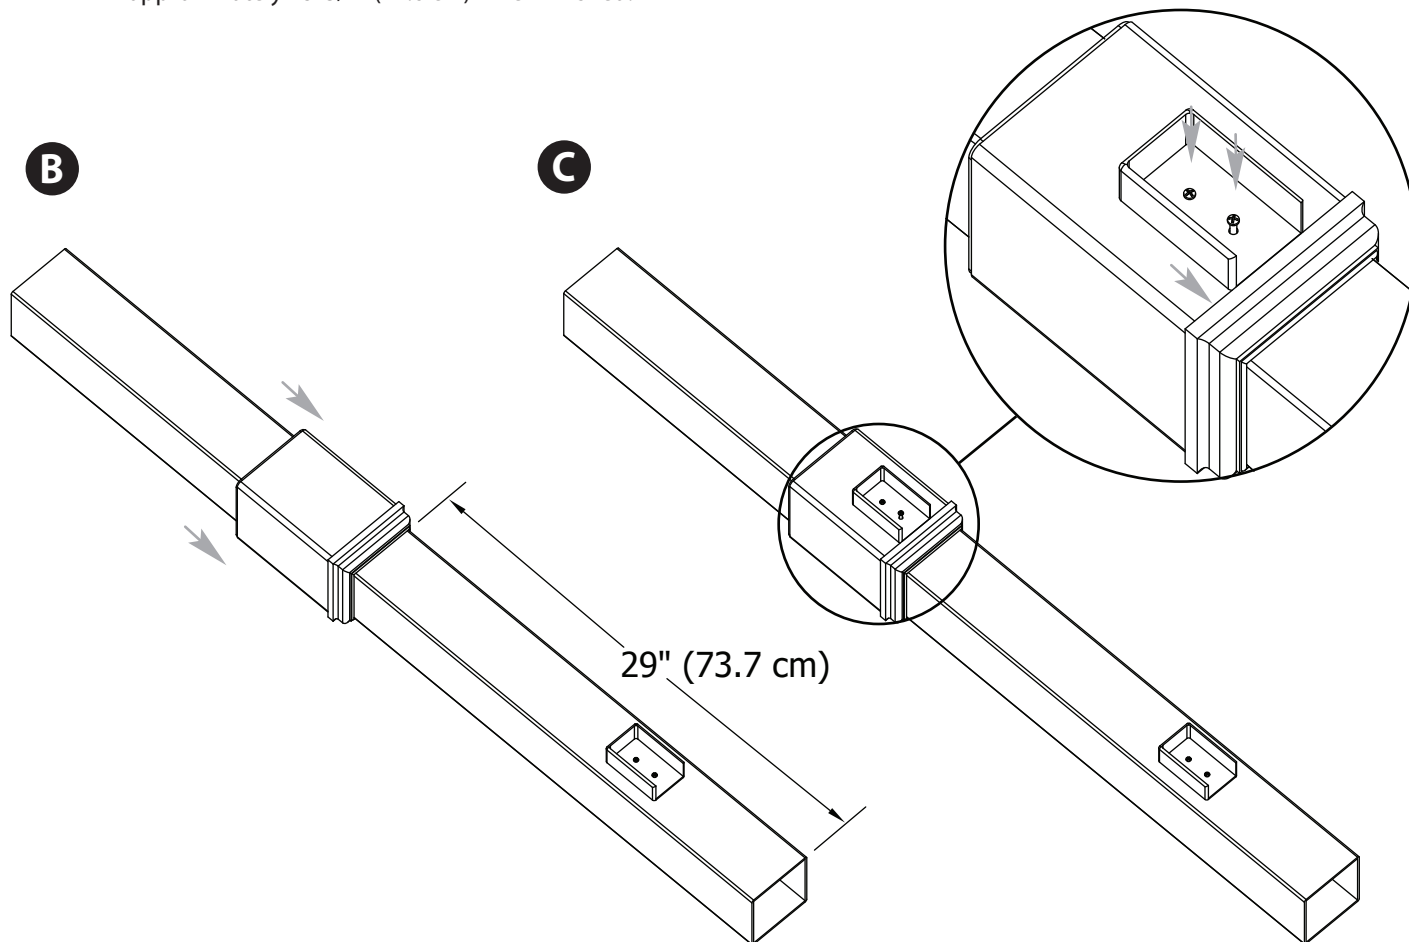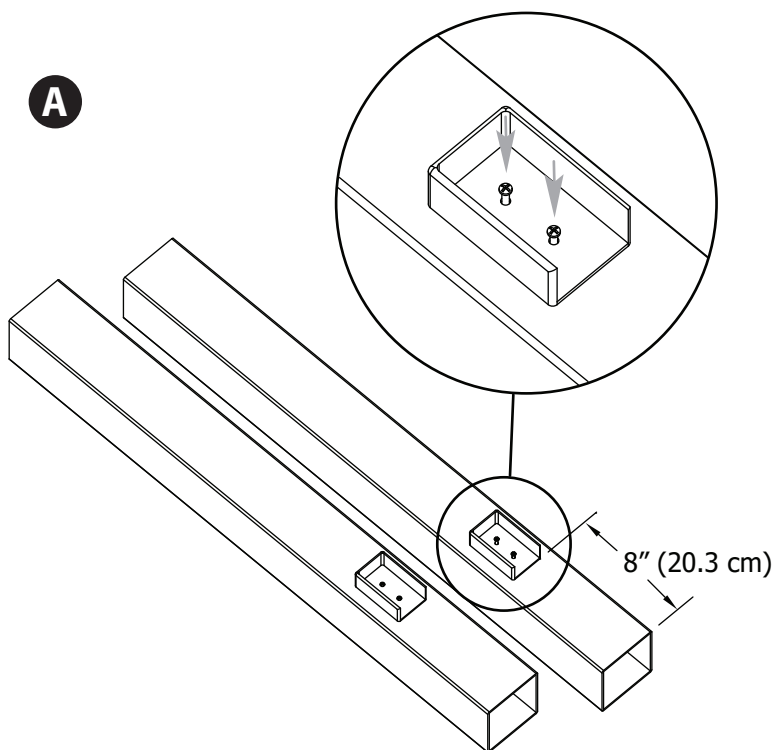

STEP TWO

A

Insert the bottom rail (part 3) into the bracket on the base molding. Make sure the holes in the rail are facing towards the second bracket on the post. Using one screw 5/8"(16mm), secure the rail in place through the side wall of the bracket as illustrated. Repeat this for the opposite side wall.

B

Insert the top rail (part 2) into the second bracket, making sure the larger sized holes in the rail are facing towards the bottom rail. Secure the rail as described in the previous step. **Note:** The holes in the rail are approx. 1/8" (3 mm) larger on one side to allow for proper alignment of the pickets when mounting. Repeat steps A and B for the remaining post and rails.

C


Break open one bundle of pickets (part 4). Start with the 41" (104 cm) picket at the furthest end of the rails, and insert each one in descending order, ending with two 29 1/4" (74 cm) pickets at the post. Make sure the tabs on the end of the pickets "snap" into the bottom rail. Open the second bundle of pickets and repeat for the opposite wing panel.

A


Bottom Rail is only routed on the one side

B

Top rail is routed on both sides: The larger opening faces the bottom rail.

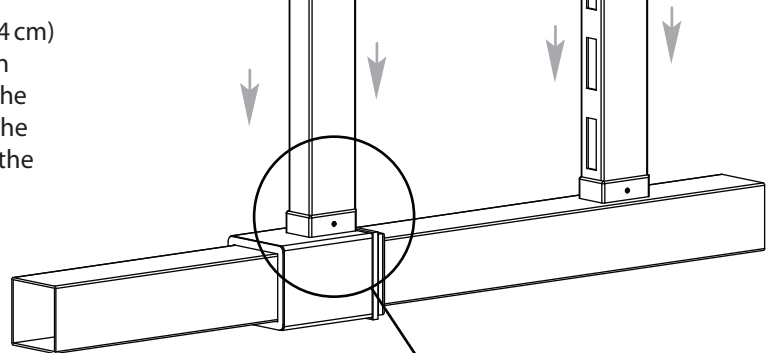

C

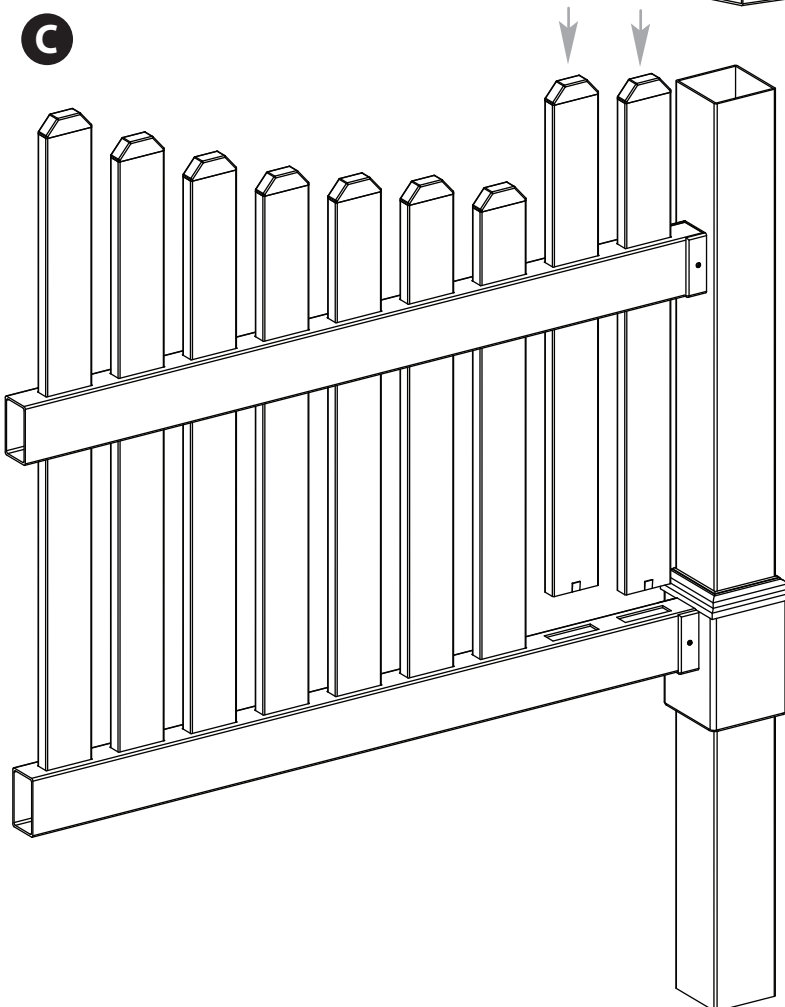

STEP THREE

A


Determine which side of your arbor the wings will be attached to. Fasten a rail mount bracket to the outside of the arbor base molding in the same manner as described in Step 1 (c). **Note:** If your arbor does not have a base mold, install bracket directly on arbor (B). You will need to use 1/2" (13 mm) filler (A) as bottom rail is shorter to allow for base mold.

B

Using two 5/8" (16 mm) screws, fasten a second bracket to the outside of the arbor post as illustrated. The distance between the brackets on the arbor post must equal the distance measured between the brackets on the wing post. Repeat steps A and B for the arbor side panel.

C

Using the distances shown, mark out each hole location on both sides of the arbor. Dig out two 16" (41 cm) deep holes.

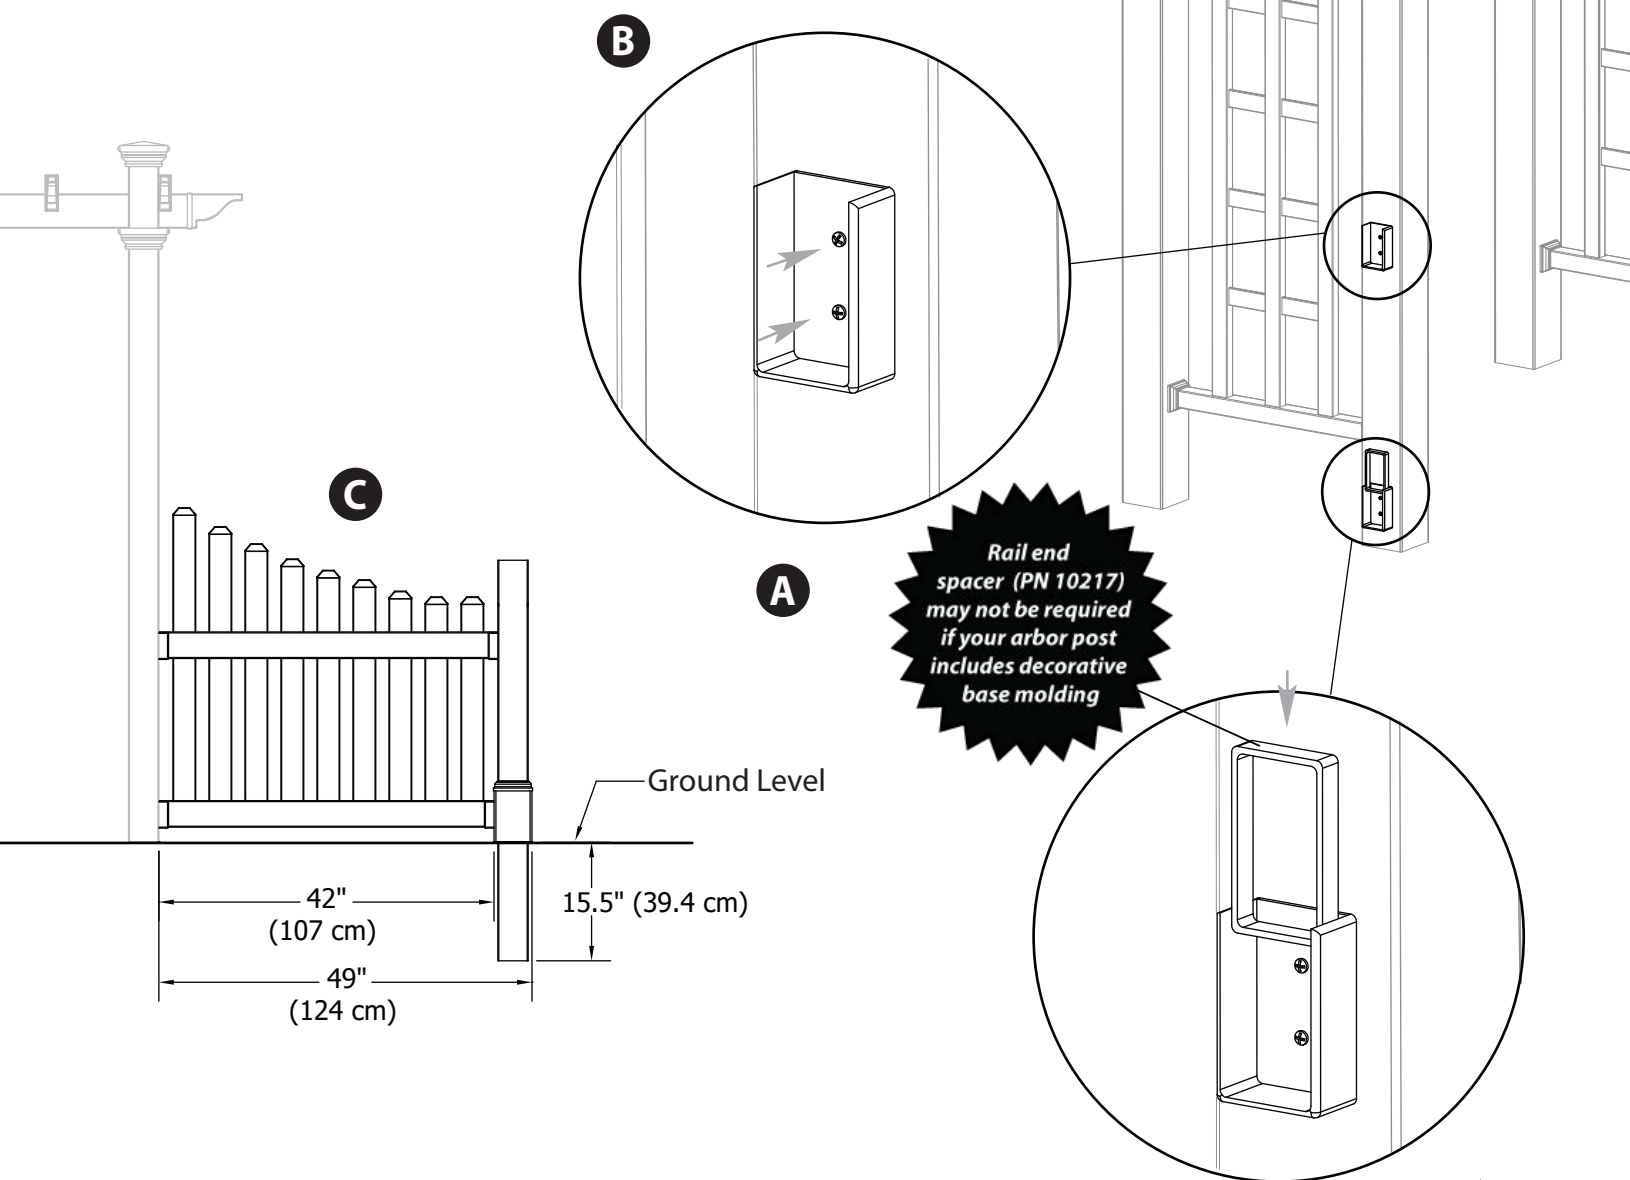

STEP FOUR

A

Lower the wing post into the hole, while slipping each rail end into the corresponding bracket on the arbor post. Check the top rail for level, and adjust the depth of the hole if needed. Secure the rail ends to the brackets as described in Step 2 (a), and fill in the hole (for added stability, use pre-mix concrete). Repeat this step for the opposite wing panel. **Note:** The bottom of the wing post base molding should be at ground level when finished.

B



Apply a generous amount of vinyl glue around the post. **Note:** The vinyl glue should be applied below the top of the picket cap level as shown. Slip one trim cap (part 6) over the end of each post. Slide each cap down until the top edge is level with the top of the first picket.

C



Apply a bead of vinyl glue to the underside of each post cap (part 5). To ensure proper attachment to the post, apply the glue to all internal "contact" points of the cap. Place the caps onto the end of each post and push down firmly until the end of the post "bottoms out" on the inside of the cap. Allow a few minutes for the glue to cure. Wipe away excess glue immediately with a damp cloth.

Vinyl glue is to be applied below the picket level.

B

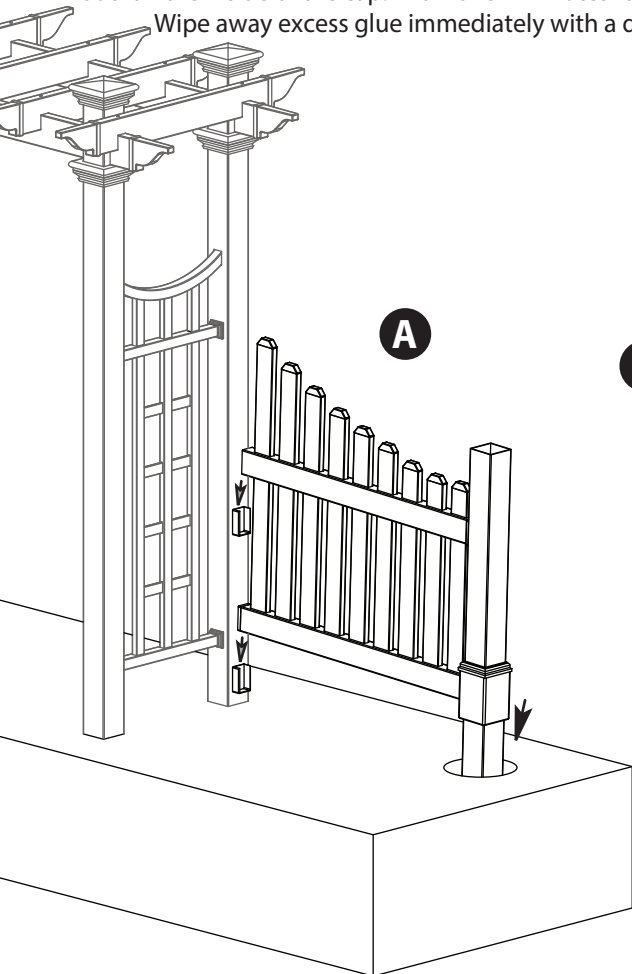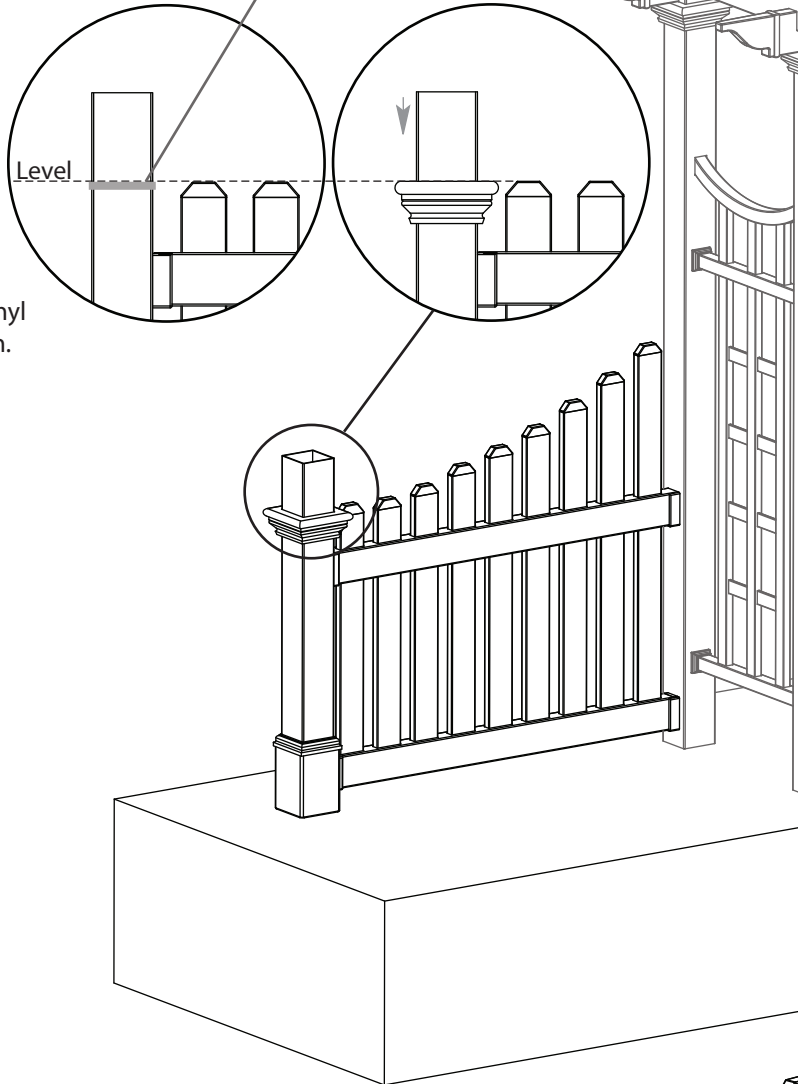

C

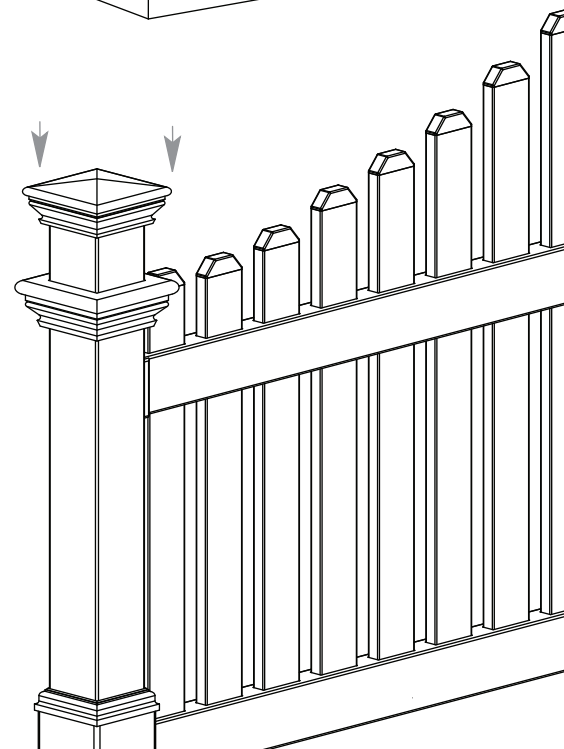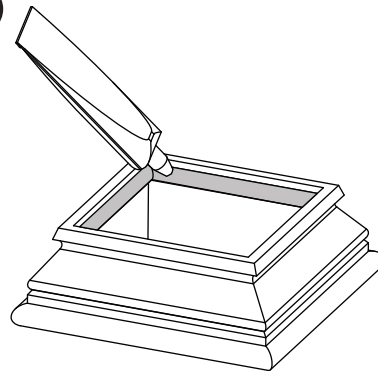


vita



CLASSIC 60" GATE PORTAIL CLASSIQUE 60" PUERTA CLASSIC 60"

VA84225

CLASSIC
CLASSIQUE
CLÁSICO

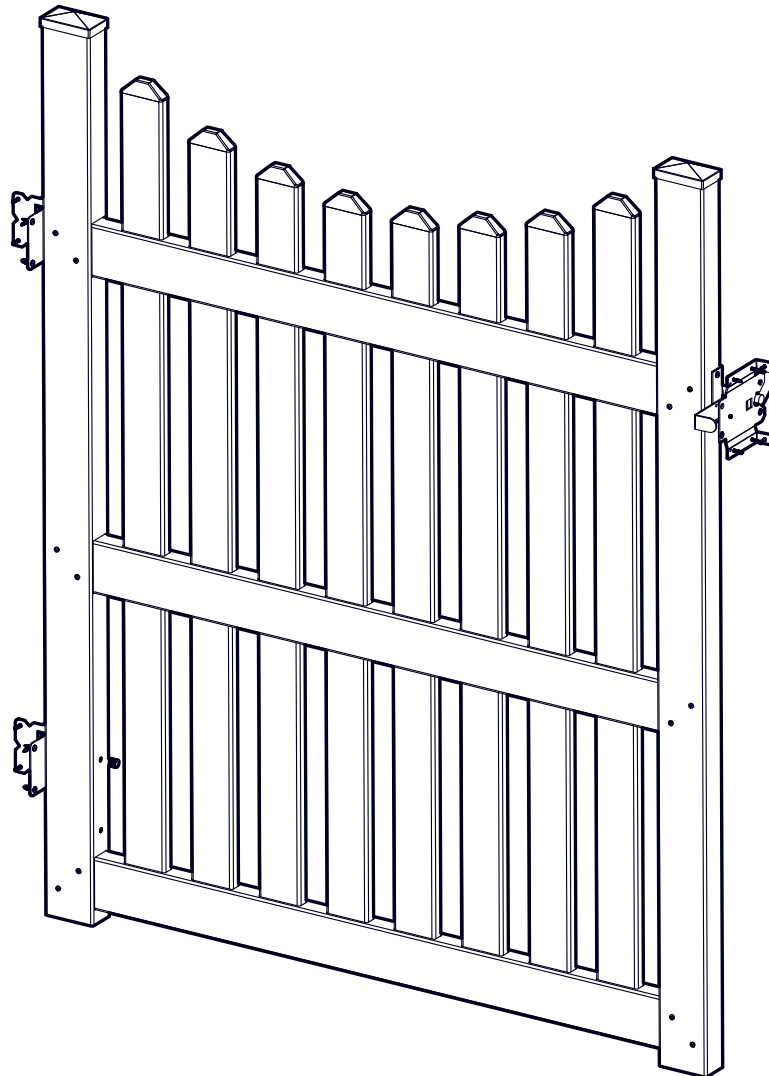

REQUIRED TOOLS AND MATERIALS (NOT INCLUDED)
 OUTILS ET MATÉRIAUX REQUIS (NON INCLUS)
 HERRAMIENTAS Y MATERIALES REQUERIDOS (NO INCLUIDOS)



PHILLIPS #2



WEAREVITA.COM

Click - Cliquer - Hacer Clic
 "Chat"



WEAREVITA.COM/SUPPORT




HELLO@WEAREVITA.COM




1-800-282-9346



@VITAHOMEANDGARDEN

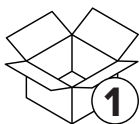

PARTS LIST
LISTE DES PIÈCES
LISTADO DE PIEZAS

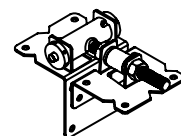

12

x2



1

x1



2

x1



3

x1



4

x1



5

x1



6

x2



7

x2



8

x2




9

x2



10

x12




13

x1



11


x38

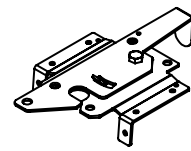

14

x1

2

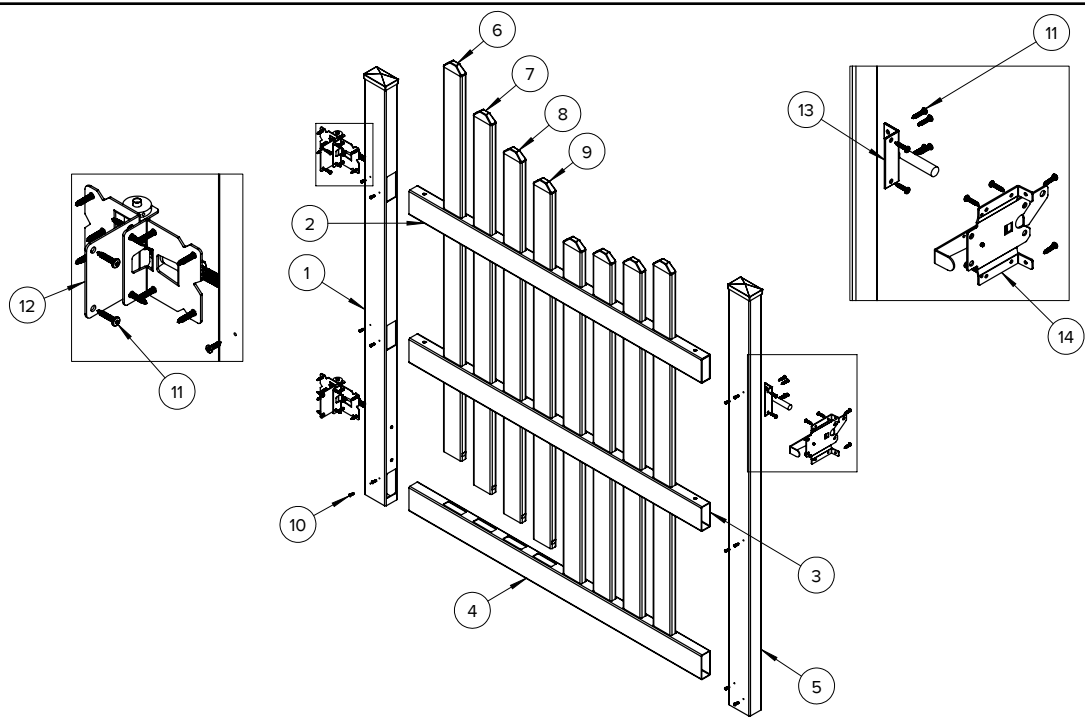


Item No.	Part Number	Description	Dimensions	Qty.
1	10361	Left Post	2" x 3 1/2" x 60 1/2" (5.1cm x 8.9cm x 153.6cm)	1
2	10363	Top Rail (Wood reinforced)	1 1/2" x 3 1/2" x 48 1/4" (3.8cm x 8.9cm x 122.5cm)	1
3	10360	Middle Rail	1 1/2" x 3 1/2" x 48 1/4" (3.8cm x 8.9cm x 122.5cm)	1
4	10359	Bottom Rail	48 1/4" x 3 1/2" x 1 1/2" (122.5cm x 8.9cm x 3.8cm)	1
5	10362	Right Post	2" x 3 1/2" x 60 1/2" (5.1cm x 8.9cm x 153.6cm)	1
6	10355	Vertical Spindle A	7/8" x 3" x 56" (2.2cm x 7.6cm x 142.2cm)	2
7	10356	Vertical Spindle B	7/8" x 3" x 53 3/4" (2.2cm x 7.6cm x 136.5cm)	2
8	10357	Vertical Spindle C	7/8" x 3" x 52 1/2" (2.2cm x 7.6cm x 133.3cm)	2
9	10358	Vertical Spindle D	7/8" x 3" x 51 3/4" (2.2cm x 7.6cm x 131.4cm)	2
10	20016	Short Screw	#8 x 5/8" (1.6cm)	12
11	20126	Long Screw	#10 x 3/4" (1.9cm)	38
12	20083	Hinge	2 3/4" x 4 1/4" (6.8cm x 10.6cm)	2
13	20084	Latch	3 3/4" x 3 5/8" (9.6cm x 9.1cm)	1
14	20085	Catch	9 3/8" x 1 5/8" (23.7cm x 4.1cm)	1

PRODUCT DIMENSIONS

DIMENSIONS DU PRODUIT

DIMENSIONES DEL PRODUCTO

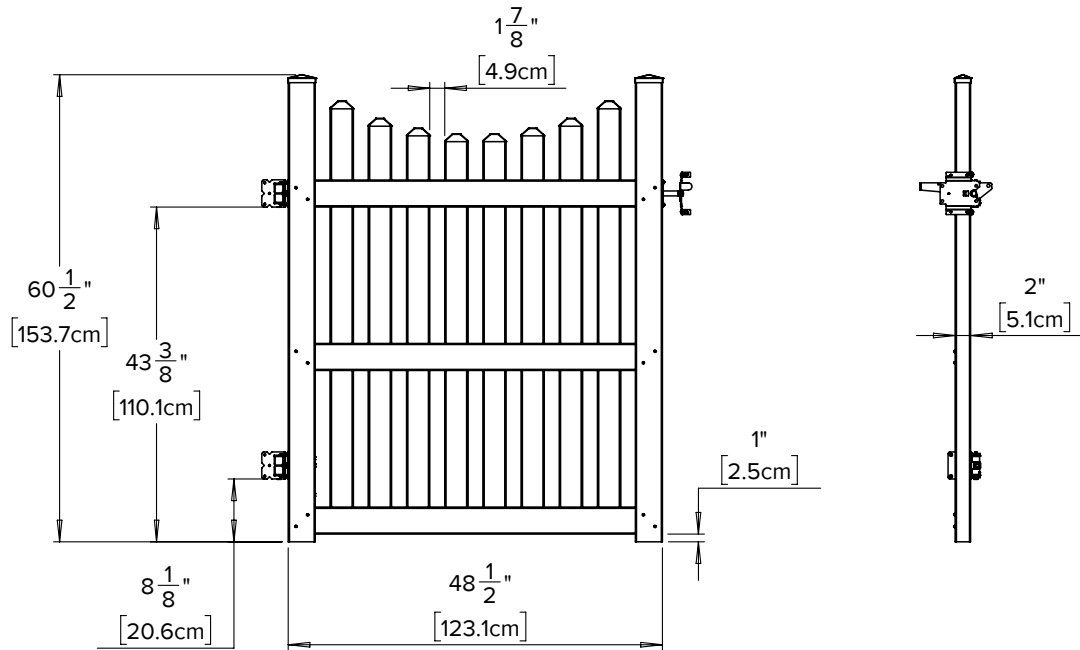

IMPORTANT NOTE! BEFORE YOU BEGIN ASSEMBLING THE GATE

THIS GATE IS COMPATIBLE WITH THE NANTUCKET DELUXE ARBOR (VA84240) AND FAIRFIELD DELUXE ARBOR (VA84242).

IF YOU HAVE THE FAIRFIELD ARBOR (VA84226) OR NANTUCKET LEGACY ARBOR (VA84250), PLEASE FOLLOW THESE ADDITIONAL MODIFIED INSTALLATION STEPS:

- 1. PURCHASE TWO WOOD BOARDS: 1" X 4" X 60" (2.5CM X 10.1CM X 152.4CM)**
- 2. LAY ARBOR POST ON THE GROUND AND INSERT BOARDS INTO INNER POSTS TO SUPPORT HINGE INSTALLATION (SEE IMAGE BELOW)**

NOTE IMPORTANTE ! AVANT DE COMMENCER L'ASSEMBLAGE DE LA BARRIÈRE

CETTE GRILLE EST COMPATIBLE AVEC LA TONNELLE NANTUCKET DELUXE (VA84240) ET LA TONNELLE FAIRFIELD DELUXE (VA84242).

SI VOUS AVEZ LA TONNELLE FAIRFIELD (VA84226) OU LA TONNELLE NANTUCKET LEGACY (VA84250), VEUILLEZ SUIVRE CES ÉTAPES D'INSTALLATION MODIFIÉES SUPPLÉMENTAIRES:


- 1. ACHETEZ DEUX PLANCHES DE BOIS : 1" X 4" X 60" (2,5CM X 10,1CM X 152,4CM)**
- 2. POSEZ LE POTEAU DE LA TONNELLE SUR LE SOL ET INSÉREZ LES PLANCHES DANS LES POTEAUX INTÉRIEURS POUR SOUTENIR L'INSTALLATION DE LA CHARNIÈRE (VOIR L'IMAGE CI-DESSOUS). L'INSTALLATION DES CHARNIÈRES (VOIR L'IMAGE CI-DESSOUS)**

NOTA IMPORTANTE: ANTES DE EMPEZAR A MONTAR LA PUERTA



ESTA PUERTA ES COMPATIBLE CON EL CENADOR NANTUCKET DELUXE (VA84240) Y EL CENADOR FAIRFIELD DELUXE (VA84242).

SI TIENE EL CENADOR FAIRFIELD (VA84226) O EL CENADOR NANTUCKET LEGACY (VA84250), SIGA ESTOS PASOS ADICIONALES DE INSTALACIÓN MODIFICADA:


- 1. COMPRE DOS TABLAS DE MADERA: 1" X 4" X 60" (2,5CM X 10,1CM X 152,4CM)**
- 2. COLOQUE EL POSTE DEL CENADOR EN EL SUELO E INSERTE LAS TABLAS EN LOS POSTES INTERIORES PARA SUJETAR LA BISAGRA (VÉASE LA IMAGEN SIGUIENTE)**

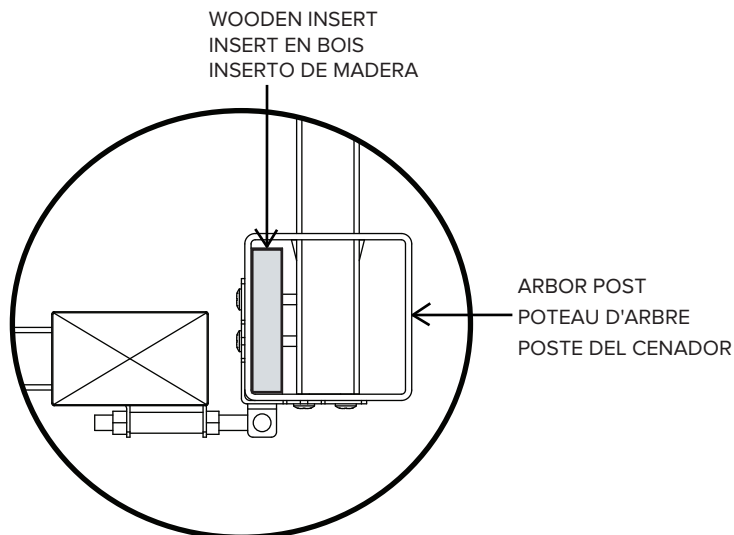


PREPARE FRAME OF THE GATE
CONSTRUIRE LE CADRE
CONSTRUIR EL MARCO

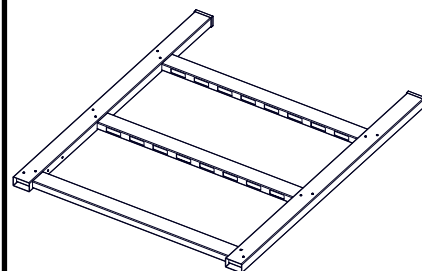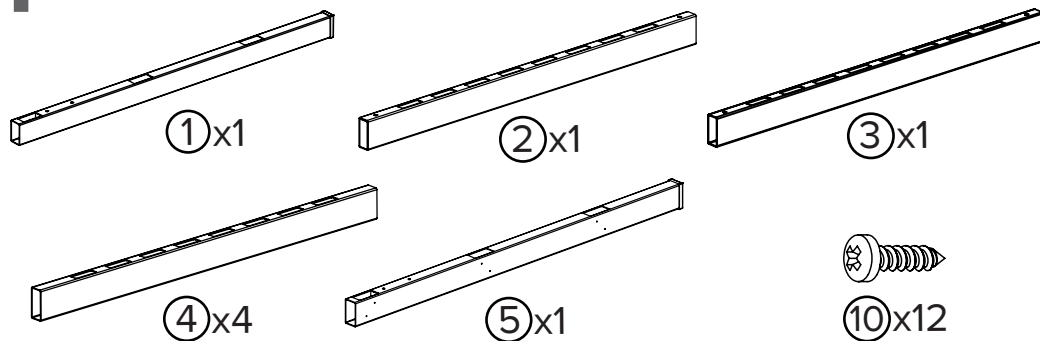



IA

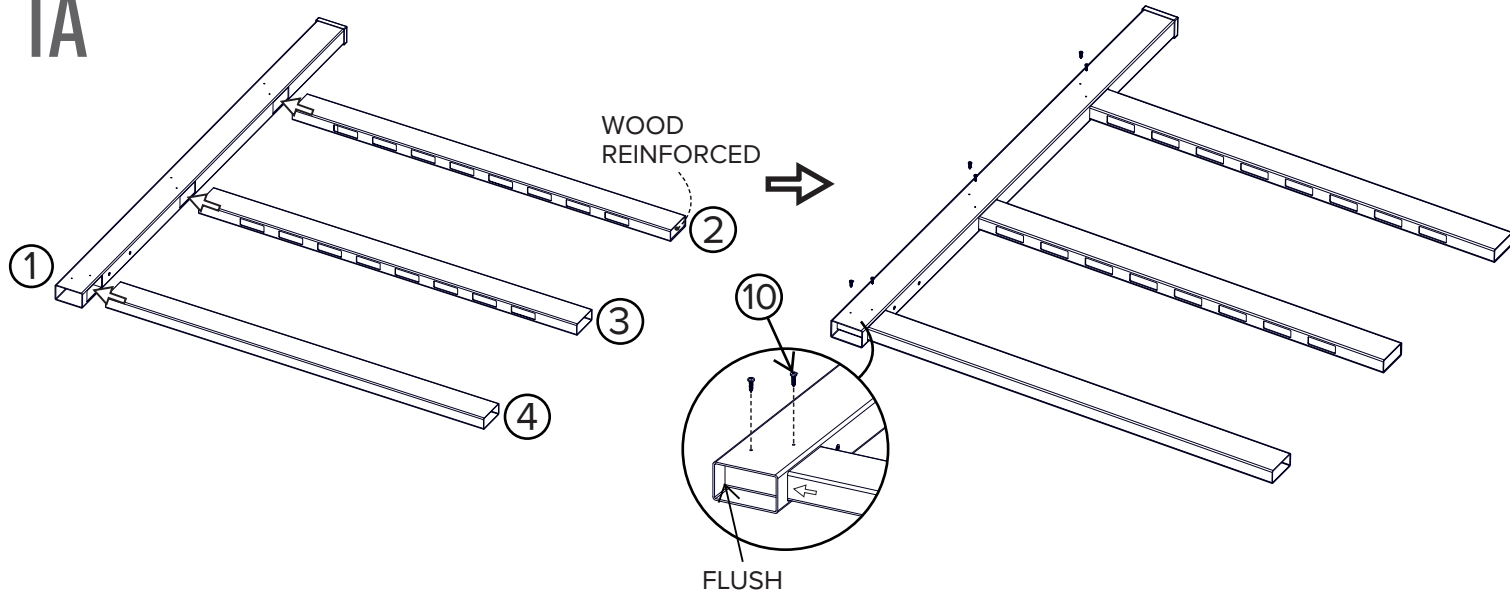


IB

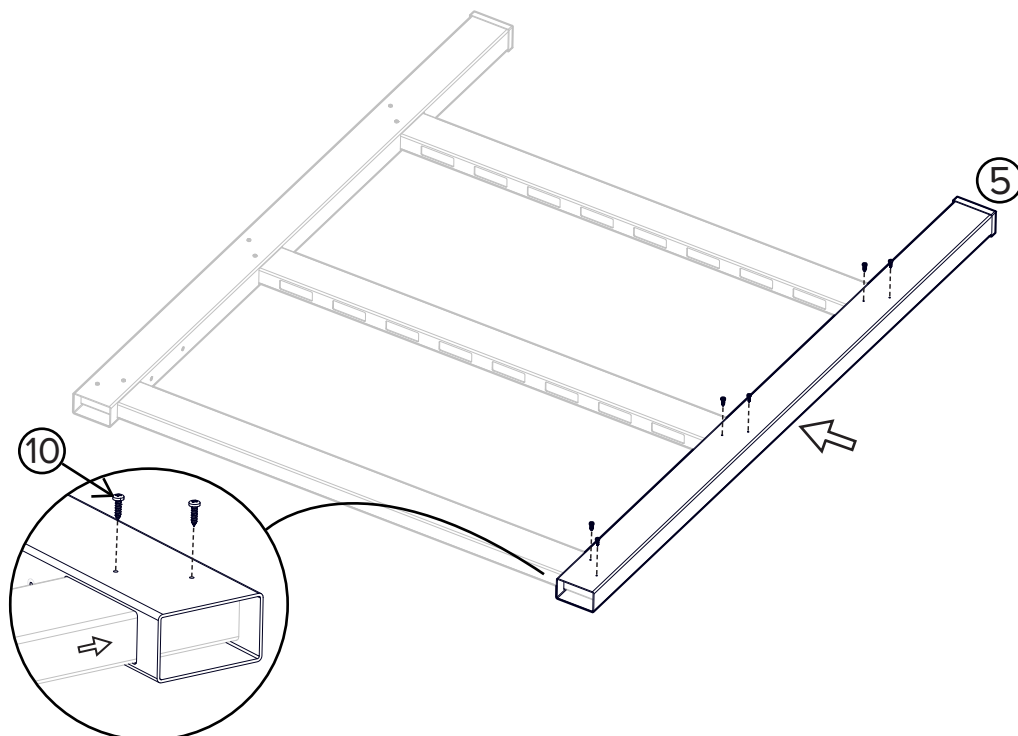

2 INSTALL VERTICAL SPINDLES AND HINGES INSTALLER DES BROCHES VERTICALES ET DES CHARNIÈRES INSTALAR HUSILLOS VERTICALES Y BISAGRAS

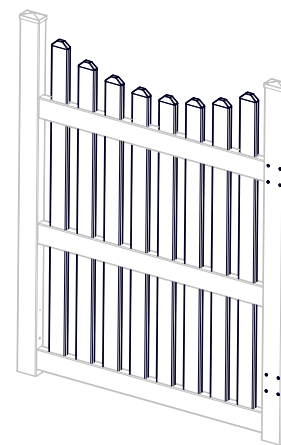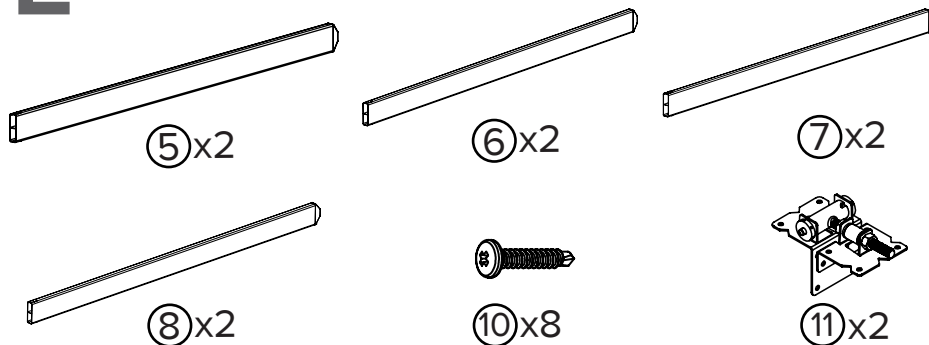




2A

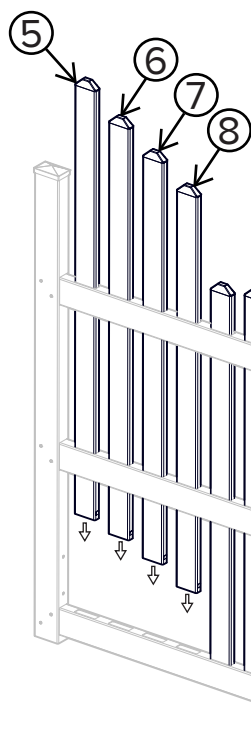

ENSURE PLACEMENT OF VERTICAL SPINDLES, ONCE INSTALLED THEY CANNOT BE REMOVED
S'ASSURER DE L'EMPLACEMENT DES BROCHES VERTICALES ; UNE FOIS INSTALLÉES, ELLES NE PEUVENT PLUS ÊTRE RETIRÉES
ASEGURAR LA COLOCACIÓN DE LOS HUSILLOS VERTICALES, UNA VEZ INSTALADOS NO SE PUEDEN QUITAR



2B

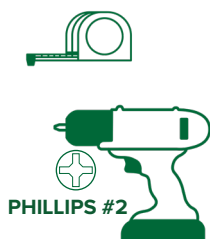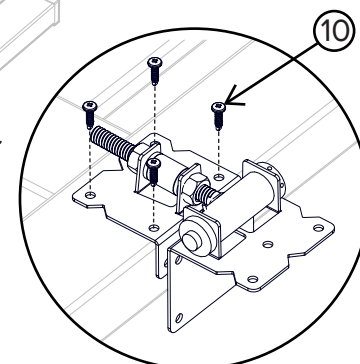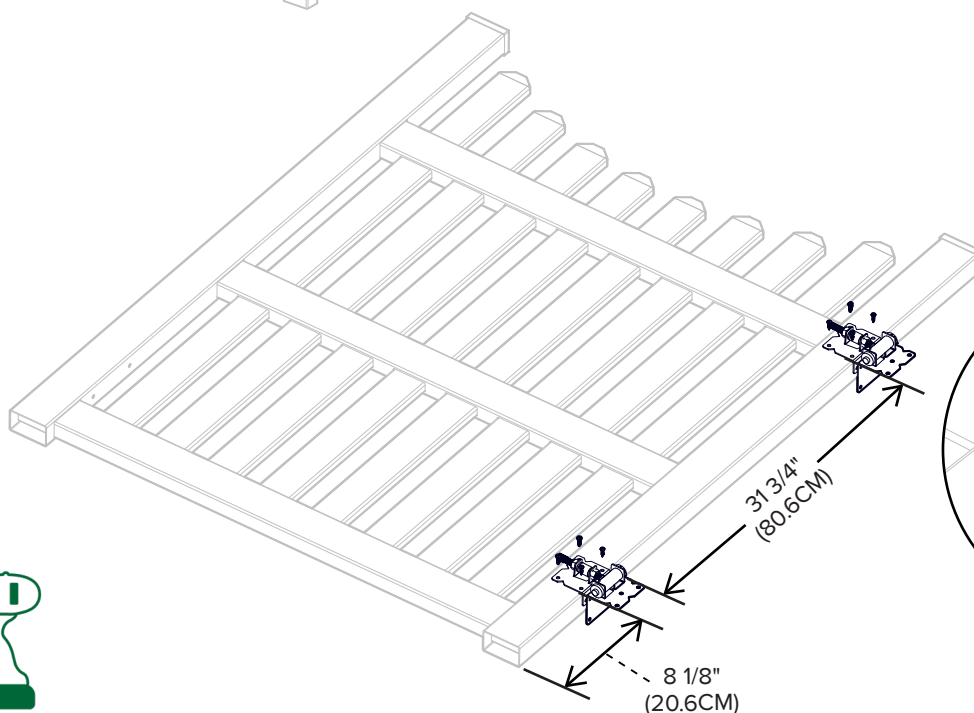


3






INSTALL LATCH AND BACK OF HINGE
 INSTALLER LE VERROU ET L'ARRIÈRE DE LA CHARNIÈRE
 INSTALAR EL PESTILLO Y LA PARTE TRASERA DE LA BISAGRA



⑩x10

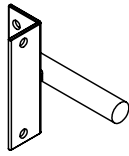

⑫x1

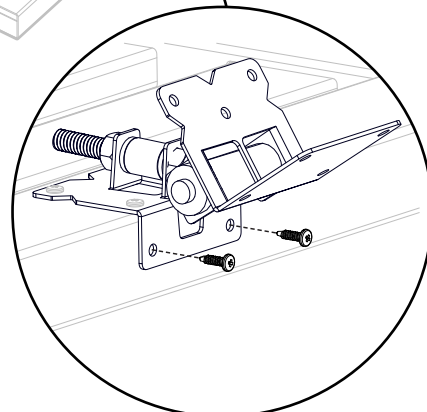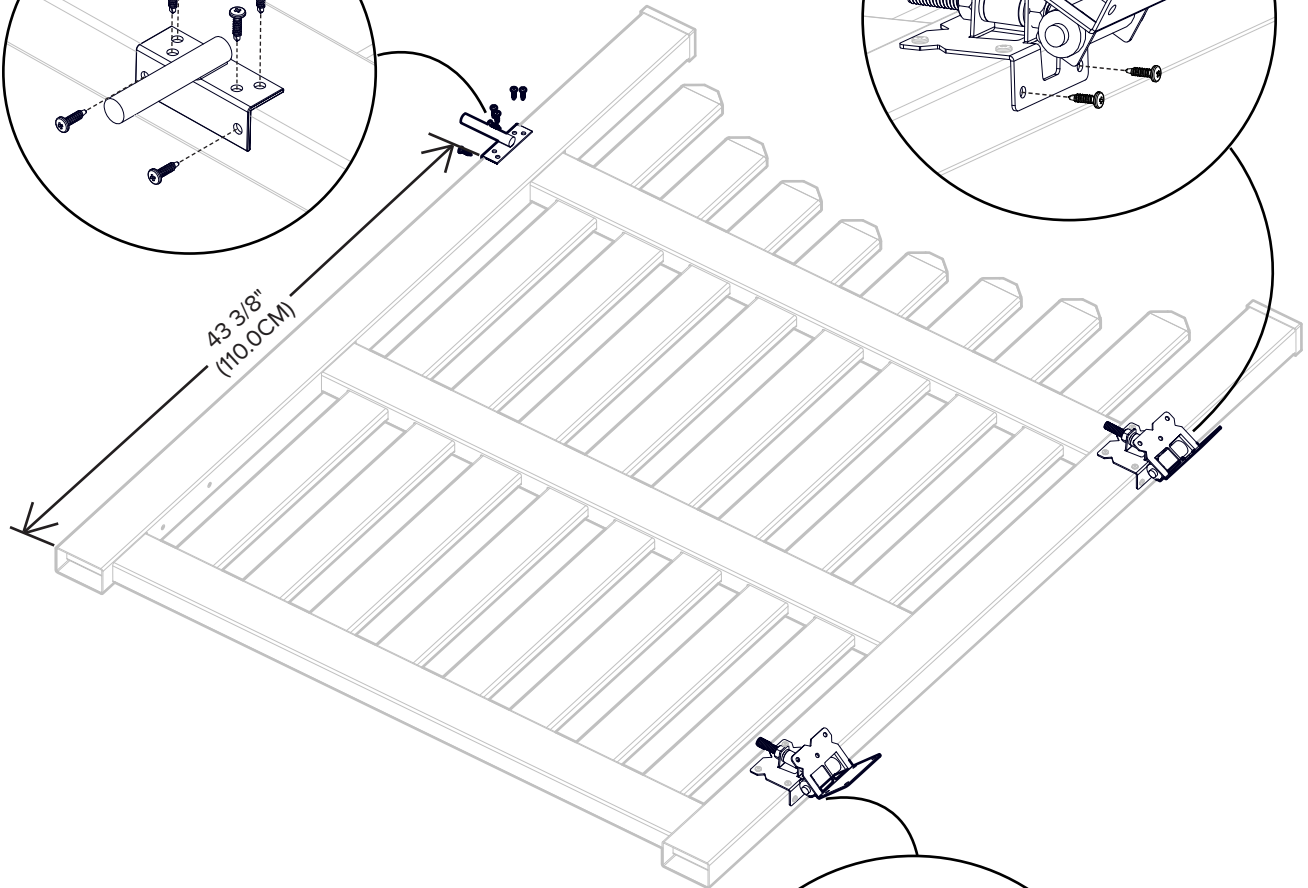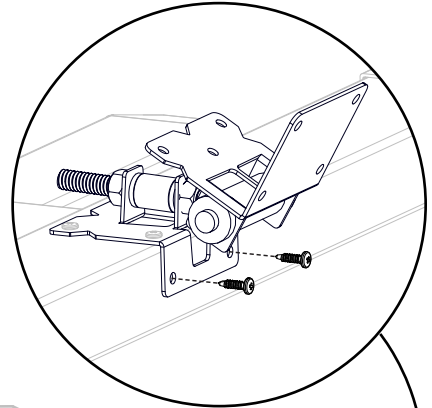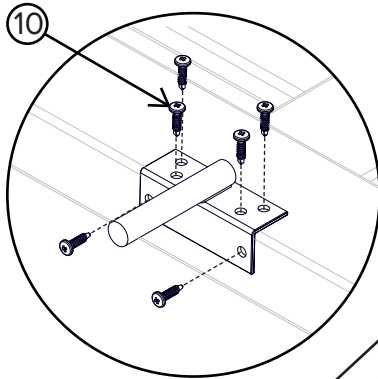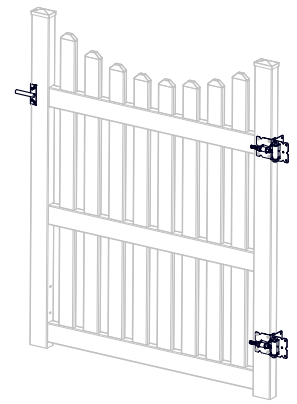

PHILLIPS #2




4

USE HINGE TO SECURE GATE ON THE ARBOR
 UTILISER LA HINGE POUR FIXER LE PORTAIL SUR L'ARBRE
 UTILICE HINEGE PARA ASEGURAR LA PUERTA EN EL CENADOR




10x14

4A



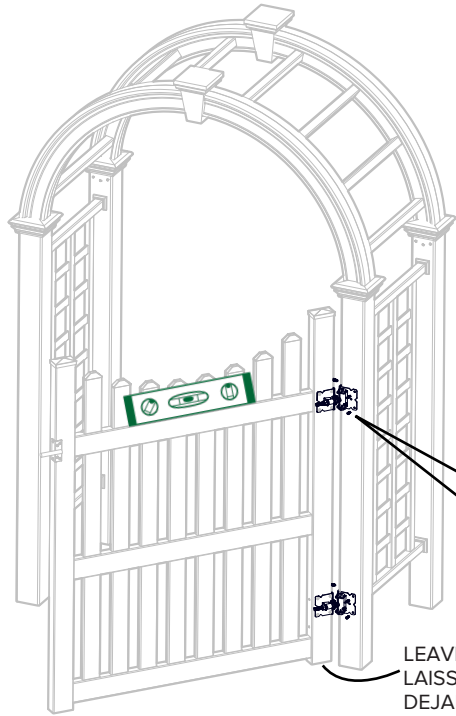


GATE AND ARBOR POST CAN BE ADJUSTED USING THESE TWO NUTS
 LE PORTILLON ET LE MONTANT DE L'ARBRE PEUVENT ÊTRE RÉGLÉS À L'AIDE DE CES DEUX ÉCROUS
 LA PUERTA Y EL POSTE DEL CENADOR SE PUEDEN AJUSTAR USANDO ESTAS DOS TUERCAS

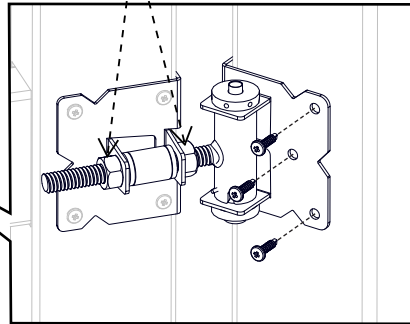

LEAVE SOME CLEARANCE
 LAISSER UN ESPACE LIBRE
 DEJAR UN POCO DE ESPACIO LIBRE

4B

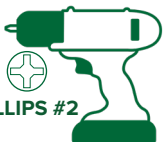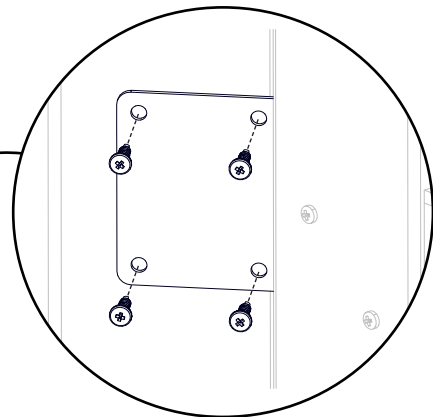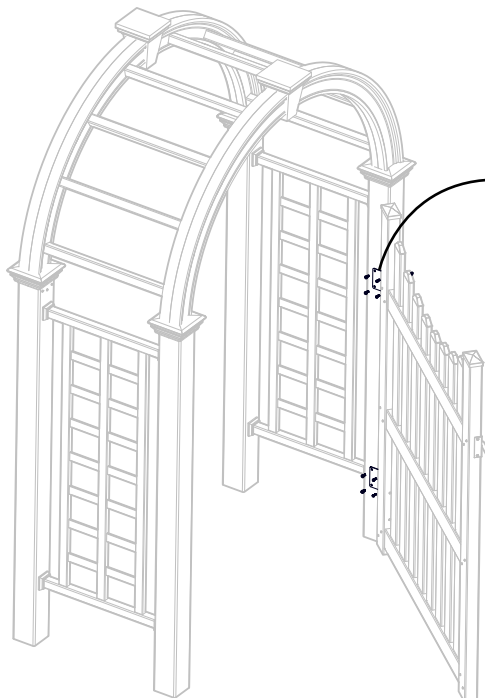


PHILLIPS #2



5

INSTALL CATCH ON THE ARBOR POST
 INSTALLER LE LOQUET SUR LE POTEAU DE L'ARBRE
 INSTALE EL RETÉN EN EL POSTE DEL CENADOR


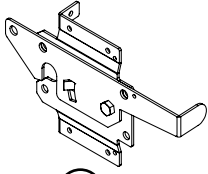


⑬x1



⑩x6

5A

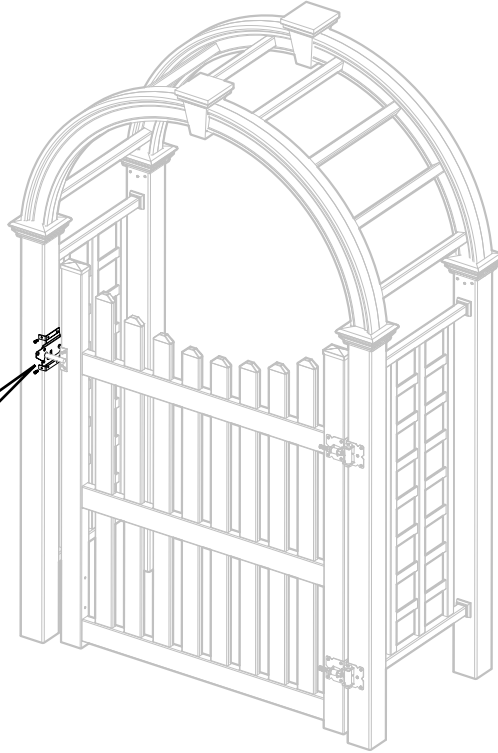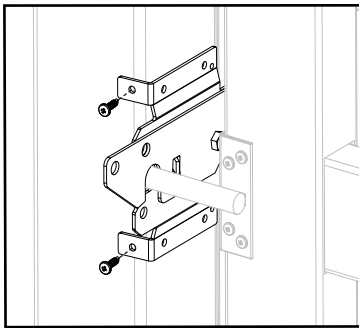

5B

